

## GENERAL SAFETY INSTRUCTIONS

READ THESE INSTRUCTIONS CAREFULLY. FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SEVERE PERSONAL INJURY.

### GENERAL CONSIDERATIONS

#### 1. EYE INJURY HAZARD.

Failure to wear safety glasses with side shields can result in severe eye injury or blindness. Always wear safety glasses with side shields which conform to ANSI Standard Z87.1 or EN 166.



#### 2. FALL HAZARD.

Maintaining improper footing and/or balance when operating the tool can cause you to fall. Do not use the tool when you are in an awkward position.

#### 3. CUT HAZARD

Always wear protective gloves when handling strap or sharp parts.



#### 4. TRAINING.

This tool must not be used by persons not properly trained in its use. Be certain that you receive proper training from your employer. If you have any questions contact your Signode Representative.

#### 5. TOOL CARE.

Take good care of the tool. Inspect and clean it daily, lubricate it weekly. Replace any worn or broken parts.

#### 6. WORK AREA

Keep work areas uncluttered and well lit.

#### 7. TENSIONING STRAP.

When tensioning strap use proper tensioner for specific strap sizes. Read the tensioner's operation and safety manual.


#### 8. CUTTING TENSIONED STRAP

Using claw hammers, crowbars, chisels, axes or similar tools will cause tensioned strap to fly apart with hazardous force. Use only cutters designed for cutting strap. Read the instructions in the cutters manual for proper procedure in cutting strap. Before using any Signode product read its operation and safety manual.

Several combinations of strap, seals and tools can be used with this sealer. Use the correct Signode products for your application. If you need help contact your Signode Representative.

## D-58 MANUAL SEALER

D-58 (423800)

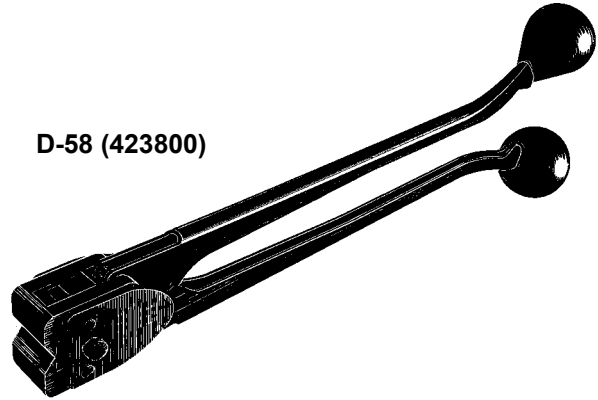


### TOOL SPECIFICATIONS

MODEL	STRAP			SEALS
	TYPE	WIDTH	GAUGE	
D-58	2030 2040 2038B	5/8"	.030" TO .040"	58DY

### SAFETY PROCEDURES FOR TOOL OPERATION

1. Before using this sealer, read all the instructions in this Operation, Parts and Safety Manual.
2. Always lift and carry the tool by the tool handle knob. Lifting the tool at any other point may expose the hand to a "pinch point".
3. Make sure the sealer jaws are placed directly on the seal.
4. While sealing, position yourself to one side of the tensioned strap.
5. This tool is designed for use with grit seals and plastic strap only. A properly crimped seal will appear as shown in the illustration. If the notched seal does not appear as shown, inspect the tool for worn and/or damaged parts. Replace tool parts as needed. Do not ship any loads secured with improperly crimped seals. Seal must be properly crimped.

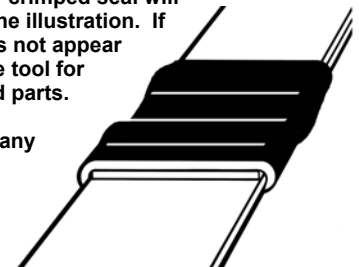

**IMPORTANT - DO NOT DESTROY THIS MANUAL.** It is the customer's responsibility to have all operators and service personnel read and understand this manual. Contact your local Signode representative for additional copies of this manual.